



NOTE:
 REFER TO WRITTEN SPECIFICATION SECTION OF THE CURRENTLY
 APPROVED PERFORMANCE-BASED PLANTING IRRIGATION
 SPECIFICATION (32 84 00) FOR ADDITIONAL REQUIREMENTS

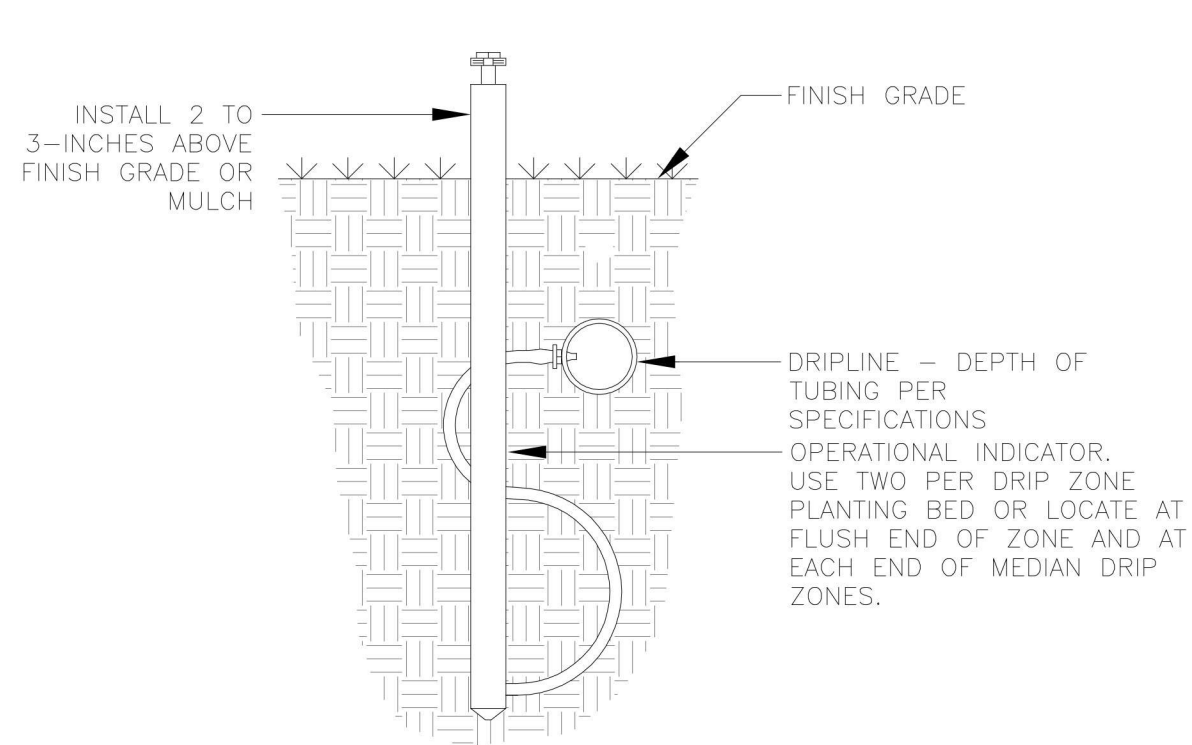

- NOTE:
1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS AND BEST PRACTICES.
 2. INSTALL ONE POP-UP OPERATION INDICATOR IN EACH DRIP BED IN A LOCATION THAT WILL BE VISIBLE AT A DISTANCE, BUT NOT A TRIPPING HAZARD.
 3. POP-UP OPERATION INDICATOR WILL SIGNAL WHICH STATION IS RUNNING. INDICATOR WILL ALSO SIGNIFY POTENTIAL DAMAGE TO DRIPLINE IF NOT ELEVATED DURING OPERATION.

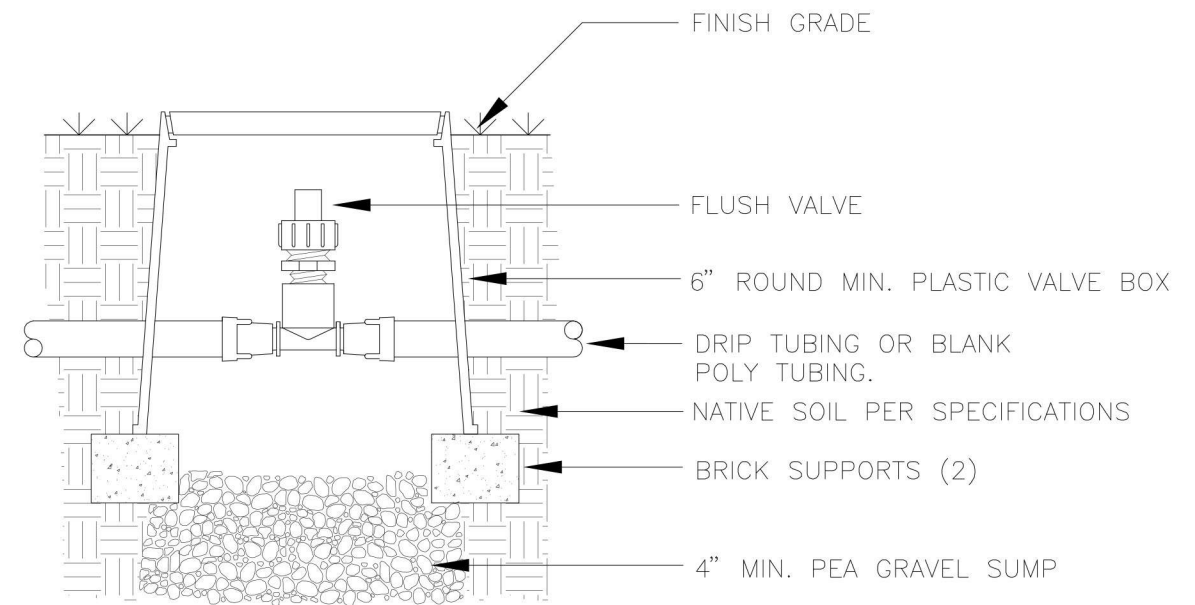

- NOTE:
1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS AND BEST PRACTICES.
 2. USE ONE FLUSH VALVE FOR EVERY 7 GPM PER ZONE.
 3. LOCATE FLASH CAP ASSEMBLY AT LOW POINTS.
 4. FLUSH RATE IS 0.8 GPM.
 5. FLUSH PRESSURE IS 2 PSI.
 6. THE SYSTEM MUST BE FLUSHED THOROUGHLY AFTER REPAIRS OR ALTERATIONS ARE MADE TO THE IRRIGATION COMPONENTS. FLUSH CAPS DO NOT ALLOW ENOUGH WATER TO PASS THROUGH EXTENSIVE DEBRIS AND, THEREFORE, MUST BE REMOVED IN ORDER TO EFFECT A MANUAL FLUSH.

9

DRIP GRID POP-UP OPERATION INDICATOR SAMPLE

3" = 1'-0"

10

DRIP GRID FLUSH VALVE SAMPLE

3" = 1'-0"